

Leak Controller

Waterproof tester

- Check for leaks – no risk involved:
Unit for the checking for leaks in wrist watches. The easy operation of the unit guarantees correct testing after exchange of the battery even by apprentices. At the same time, the machine is a reliable and maintenance-free watch testing unit for the professional watchmaker.
- Functioning of the unit:
By means of the integrated vacuum pump, the machine creates a difference of pressure between inside and outside of the watch. The measuring gauge is sensitive to any movement of the watch case down to 1 / 1000 mm and instantly detects any pressure compensation in which case the watch has a leak. If the difference of pressure remains the same, the watch is watertight. The machine has a mechanical design and even allows the testing of low-price watches with easily deformable watch-glasses (no risk of breaking).



	Leak Controller
Order number	1084100
List price	1.000,00 €
Ext. dimensions W / D / H (mm)	155 / 170 / 315
Weight (kg)	3,5
Mains voltage (V~)	100 - 240
Mains frequency (Hz)	50 / 60
Power consumption total (W)	60

Scope of delivery


- Operating manual
- Plug-in power supply (1.5m length)

All prices ex works, excluding packaging.

Technical specifications serve as orientation values and are subject to tolerances due to production and manufacturing. Proper operation can only be guaranteed when using original Elma accessories.

Leak Controller

Dimension definition

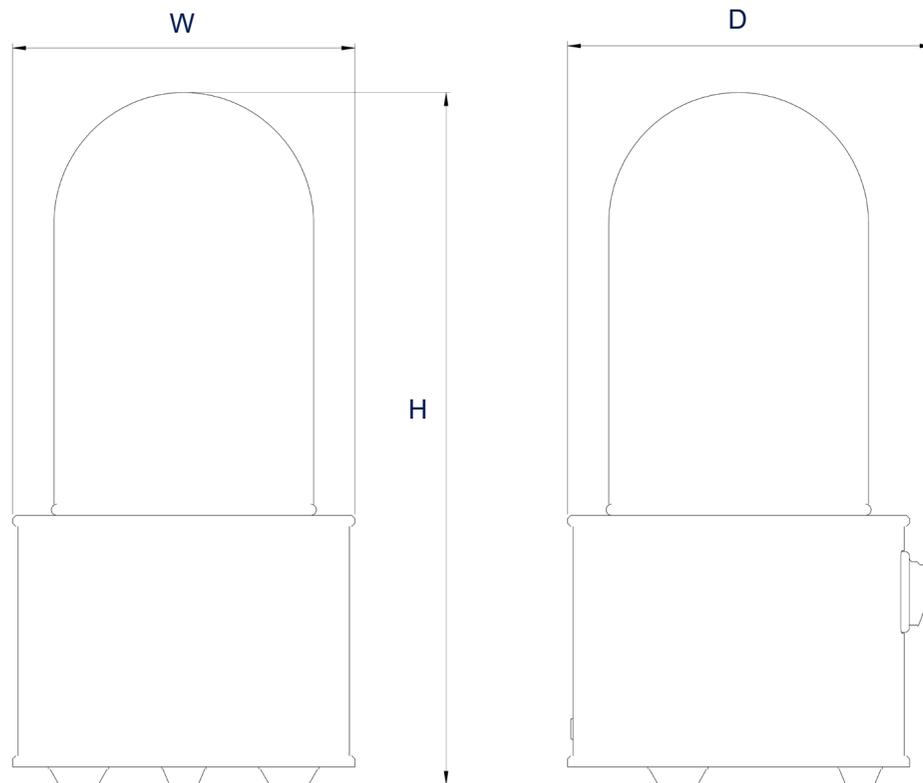

The drawings are meant as a visualization aid and are not true to scale.

Technical specifications serve as orientation values and are subject to tolerances due to production and manufacturing. Proper operation can only be guaranteed when using original Elma accessories.